



High Pressure Washers

Reprinted from Simpson Industrial Cleaning Systems Literature

IMPORTANT!

Read and Understand These Safety Precautions Before Operating the Machine

Pressure Washers operate at pressures ranging from 1000 to 5000 Pounds Per Square Inch (PSI). Failure to observe these warnings could result in serious personal injury. Operate this equipment only after reading and understanding ALL instructions!

If you experience any problems contact A-Z Rental immediately at (952) 944-8040

DO NOT ATTEMPT ADJUSTMENTS OR REPAIRS YOURSELF!

Safety

1. **ALWAYS** wear proper face protection when operating the machine.
2. **NEVER** point the gun valve at yourself or any other person.
3. **NEVER** fill the fuel tank with fuel when the engine is running, or if the engine is still hot.
4. **NEVER** start the machine until all quick coupler hose connections are checked to see that they are in a locked position.
5. **NEVER** start the machine until water is turned on at the faucet and flowing from the end of the extension. Then insert desired cleaning nozzle into the extension quick coupler.
6. **ALWAYS** keep hands and feet clear of cleaning nozzle.
7. **ALWAYS** set the trigger safety lock when the gun valve is not in use.
8. **ALWAYS** relieve the pressure in the system before uncoupling.

Operating A High Pressure Washer

1. Check fuel tank. Fill with proper fuel. Check oil level in engine and pump. Fill if necessary. Open the fuel valve.
2. Attach any accessories to be used. See accessory operating instructions for more information on accessories and their proper use.
3. Connect high pressure hose to the machine and gunvalve with quick couplers. Make sure that the locking sleeves are in the "LOCKED" position. Failure to properly lock quick coupler sleeves will result in blowing out the quick coupler o-ring seal. Excessive leaking will occur if coupler o-ring is missing.
4. Attach a standard garden hose (minimum $\frac{3}{4}$ " I.D) to the machine and turn on water supply. DO NOT use a shallow lawn sprinkling well as a water source!
5. With cleaning nozzle removed from the gun valve extension, squeeze gun valve trigger and hold open until a smooth flow of water appears. Then close trigger.
6. Start machine. Let it run for 3 minutes without load to warm up.
7. Select desired cleaning nozzle or accessory, and insert into extension quick coupler, making sure locking sleeve is in "LOCKED" position.
8. Machine is ready for operation. DO NOT leave gun valve in a closed position for longer than 5 minutes with machine running. Stop machine to avoid overheating pump.
9. After cleaning job is finished, allow machine to run for one minute without load. Then stop the machine and turn off the fuel valve. Turn off water at source and open gun valve to release system pressure BEFORE disconnecting hoses.

Please feel free to call if you have any questions not covered in this document. (952) 944-8040

This document also available for download at www.a-zrental.com