


DOSCO STUMP GRINDER

Please feel free to call if you have any questions not covered in this document. (952) 944-8040
This document also available for download at www.a-zrental.com

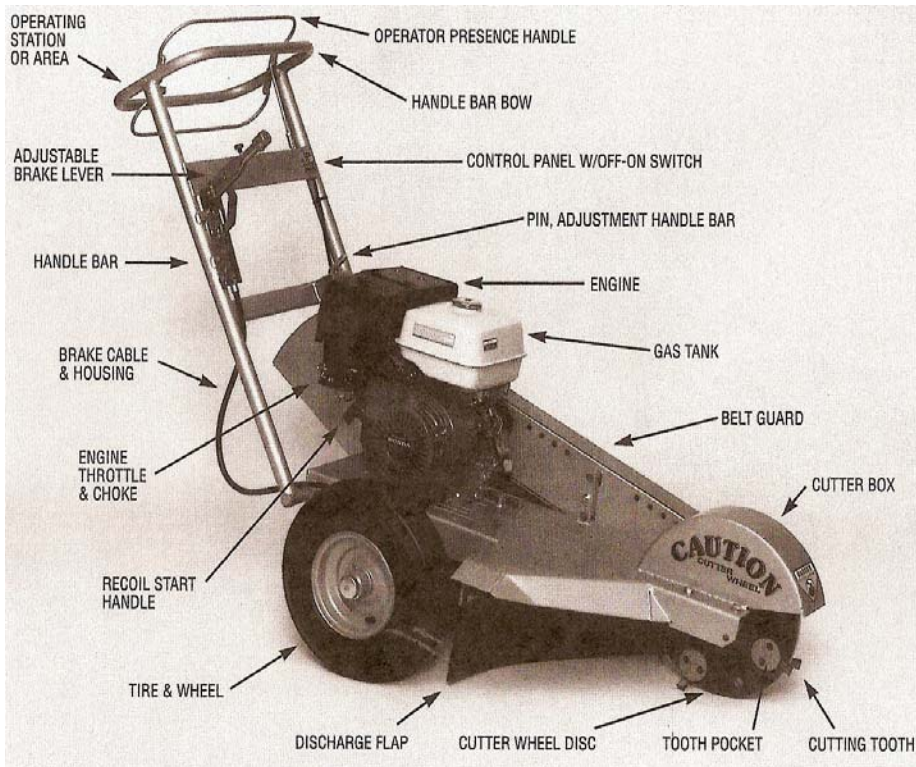

Read all instructions and decals before starting.

- Wear only proper safety clothing, ie. Safety glasses, sturdy footwear, gloves, face shield, etc.
- Operate grinder only from correct position.
- Never start grinder before checking controls and brake.
- Never allow anyone near grinder while in use.
- Always lock brake before grinding begins.
- Never allow anyone in area while grinding.
- Never leave grinder unattended.
- Never grind anything other than stumps.
- Always position machine to protect windows and vehicles from flying debris.
- Always be prepared for emergencies by having first-aid supplies and fire extinguisher nearby.
- Never remove guards or shields.
- Never attempt to override any safety devices.
- Never use in bad or questionable weather.
- Always shut the machine off if any unusual noise or vibration occurs.

BEFORE GRINDING STUMPS

- Read and review all safety precautions
- Be aware of and watch for all dangerous situations
- Be aware of all underground utilities before grinding stump
- Protect windows and vehicles from possible flying debris

STARTING STUMP GRINDER

- Press down on handle bar so that cutter wheel is off the ground
- Pull out on-off switch (located on control panel)
- Pull choke if engine is cold (located on engine)
- Set throttle about ¼ open (located on engine)
- Turn engine switch to "on" location (located on engine)
- Engage operator presence switch by pulling up on handle bar bow (small diameter bars)
- Pull recoil start handle/cord (located on engine)
- When engine starts, close choke
- Pull throttle to full open

SETTING UP GRINDER

- Position stump grinder with cutter wheel at front edge of stump
- Raise or lower handle bar to a comfortable position
- Pull down on brake lever to lock brake

GRINDING STUMP

- Push grinder to stump so that the stump is located just in front of the cutter wheel
- Using the brake lever, lock the one wheel
- Pull throttle to full open (located on engine)
- Lower the cutter wheel "slowly" using a left to right motion to grind the stump
- Grind stump to desired depth
- Handle bar may have to be adjusted to accommodate for height of stump or desired depth